


CLINICIAN ADJUSTABLE SERIES

Our most popular model just got better! The Clinician's fine handmade furniture construction sets Oakworks® Spa Tables apart from the rest. It offers the perfect blend of beauty, function and value with options to have it reflect your spa's aesthetic. Now it comes standard with a removable and replaceable top!



New!
One Piece Removable Pad

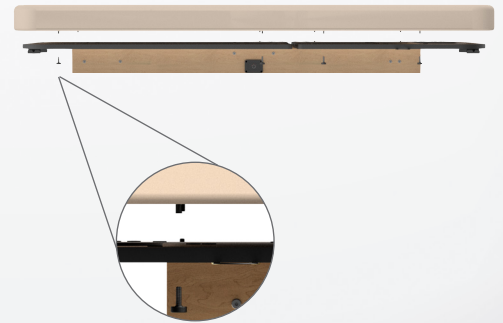

Padding and fabric on tables never last as long as the bases, and occasionally they get damaged; in the past you had to replace the whole table. Our new design features finger knobs that can be removed in minutes, allowing you to remove the foam and fabric and install a new one without any special tools so your table will be serviceable for much longer.



Flat Top Lift Assist Backrest Lift Assist Salon

FEATURES



Storage (Optional)

Discreetly store your supplies by using the in-table cabinet. The sliding doors offer an opening for access to stored accessories and supplies. They are easy to open even when the table is heavily draped.



Adjustable Lift System

Our most economical system, the adjustable leg system utilizes a single knob per leg that securely locks the table at the chosen height.

made in the USA
with US & imported parts



OAKWORKS® Spa

SPECIFICATIONS

- New! Removable and replaceable padding
- AeroCel™ padding for ultimate comfort
- Large height range - 26" - 37.5"

TABLE SPECIFICATIONS

Height Adjustment	Manually with Rubber Grip Knobs
Weight Capacity	500 lbs. (249.5 kg)
Fabric	TerraTouch - Medical Grade, ISO 10993
Finish	Water Based Stain or Lacquer
Padding	4" (10.2 cm) or 6" (15.2 cm) AeroCel™ (Optional)
Height Range 4" (10.2 cm) pad	26" - 37.5" (66 cm - 95 cm)
Width	29" (73.6 cm), 31" (78.7 cm), 33" (84 cm)
Length	73" (185.4 cm)
Options (must be ordered with table)	Storage
Warranty	3 years parts, 2 years labor
Safety Listings	cETLus listed 3034177

Accessories	Adjustable Side Arm Rests, Boiance Shelf Support, Boiance Face Rest Cushion, Quick Lock Face Rest
-------------	---

DOORS

Our doors are sliding doors because this design is the most functional. They are easy to open even when the table is heavily draped and need less room than hinged doors in small rooms.



Frame and Panel Wood



One Piece Slotted Wood




One Piece Frosted Acrylic

STAINS




LACQUERS



TERRATOUGH COLORS

Meets the requirements of ISO 10993-1:2009 Biological Evaluation of Medical Tables & passes testing for Cytotoxicity, Skin Irritation & Sensitization as well as CA TB117 Fire Retardance testing. Please refer to the product cleaning instructions for a list of approved cleaners and disinfectants.

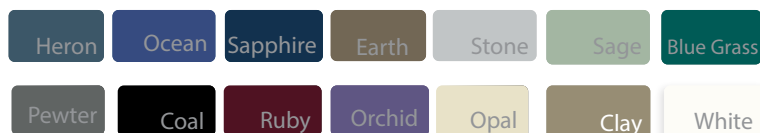

BOIANCE™ FACE REST CRESCENT

This patented pad is the most comfortable on the market. And the pad is everything! The unique design features water balls that float the face and maximize natural circulation in the skin while minimizing sinus pressure.



QUICKLOCK™ FACE REST PLATFORM

The industry favorite for 20 years, this super adjustable platform securely locks in place at exactly the right position for every client. Available in black or vanilla.



ADJUSTABLE SIDE ARMREST

These versatile and comfortable removable arm rests feature a wide range of positions. They always stay level, regardless of the backrest angle. They offer comfortable positioning and can be moved completely out of the way to allow guests to get on and off the table easily.



BOIANCE SHELF SUPPORT

The shelf and bracket used together allow you to create the perfect place for clients arms when working on their back. The shelf can also be used alone as a head support for facials and other aesthetic treatments. The shelf is designed to allow therapists to relax their shoulders while working on clients, minimizing stress and injuries.



717.235-6807 www.spatables.com email: customerservice@oakworks.com