


PROLUXE SERIES

Our value priced spa table just got better! Offering all the comfort features of our most expensive tables, this workhorse design now comes with our new, removable one piece pad system with 4" of AeroCel padding. The favorite of high volume spas across the US, the table can be configured to offer all our high end options at a much lower price.



New! One Piece Removable Pad

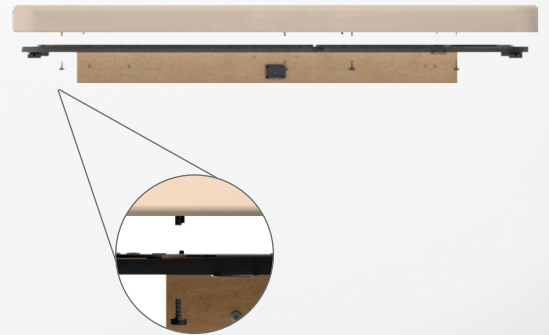

Padding and fabric on tables never last as long as the bases, and occasionally they get damaged; in the past you had to replace the whole table. Our new design features finger knobs that can be removed in minutes, allowing you to remove the foam and fabric and install a new one without any special tools so your table will be serviceable for much longer.



FEATURES




Storage Options

The Proluxe offers an optional storage shelf and hot towel cabi shelf that gives you the functionality of a cabinet model table.



Bluetooth Speaker System

Bluetooth Speaker Sound System magnetically connects to the bottom of the table near the face rest to create a calming experience.

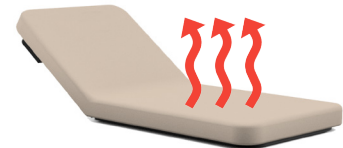

Integrated Heated Top (Optional)

Our new system is imbedded in the foam, creating a more even heat, and has three settings. Designed originally to be used in car seats and hospital beds, the heating element automatically shuts off after 10 hours providing peace of mind for safety and energy conservation.

made in the US



OAKWORKS[®] Spa

SPECIFICATIONS

- New! Removable and replaceable padding
- 4" AeroCel™ padding for ultimate comfort
- Large height range - 19" - 37" (Flat Top)
22" - 39" (Lift Assist Backrest & Salon)
22" - 40" (Electric Salon)

TABLE SPECIFICATIONS

Lift System	Electric, Rigid Twin Steel Base Design
Controls	Foot Control
Lifting Capacity	550 lbs. (249.5kg)
Fabric	TerraTouch - Medical Grade, ISO 10993
Finish	Powder coated base with wheat rails
Padding	4" (10.2cm) or 6" (15.2cm) AeroCel™ (Optional)
Height Range (4" (10.2 cm) pad)	19" - 37" (48cm - 94cm) Flat Top 22" - 39" (56cm - 99cm) Lift Assist Backrest & Salon 22" - 40" (56cm - 102cm) Electric Salon
Width	29" (73.6 cm), 31" (78.7 cm), 33" (83.8 cm)
Length	73" (185.4 cm)
Options (must be ordered with table)	Integrated Heated Top, ABC System, Oakworks Bluetooth Speaker, Casters, Hand Control, Second Foot Control
Warranty	3 years parts, 2 years labor
Safety Listings	cETLus listed 3034177
Accessories	Adjustable Side Arm Rests (salon tops only), Boiance Shelf Support, Boiance Face Rest Cushion, Quick Lock Face Rest, Proluxe Shelves

TERRATOUGH COLORS

Meets the requirements of ISO 10993-1:2009 Biological Evaluation of Medical Tables & passes testing for Cytotoxicity, Skin Irritation & Sensitization as well as CA TB117 Fire Retardance testing. Please refer to the product cleaning instructions for a list of approved cleaners and disinfectants.




717.235-6807 www.spatables.com email: customerservice@oakworks.com

ABC SYSTEM (Optional)

Oakworks Patented ABC system allows you to create the perfect level of support for each client, taking pressure off their breasts and tension out of their back. The system also raises the pad above level, making it a great head support for face up positions, and can be used for stretches also.



Incredible breast comfort
Lower to lessen pressure

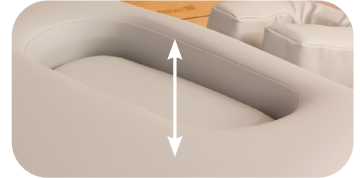

Electric adjustments
Large adjustment range



Head support
Built in head support



Pectoral muscle stretch
Advanced positioning

ADJUSTABLE SIDE ARMREST

These versatile and comfortable removable arm rests feature a wide range of positions. They always stay level, regardless of the backrest angle. They offer comfortable positioning and can be moved completely out of the way to allow guests to get on and off the table easily.



BOIANCE SHELF SUPPORT

The shelf and bracket used together allow you to create the perfect place for clients arms when working on their back. The shelf can also be used alone as a head support for facials and other aesthetic treatments. The shelf is designed to allow therapists to relax their shoulders while working on clients, minimizing stress and injuries.

